

TRAP FIELD INSTRUCTIONS FOR SOLO SHOOTER:

1. Figure out which field you are shooting on. Field 1 is just outside the clubhouse and field 2 is located down beyond the double barns.
2. Open all of the doors to each trap house and secure them so they are not in the way.
3. Grab the remote for the field you will be using. (remotes are found in the white boxes by the medical supplies up at the club house).
4. **SIGN THE SIGN OUT SHEET EACH TIME YOU USE THE REMOTES.**
5. Push the ON button on the bottom left corner of the remote. Make sure, on the top of your remote, that the microphone is plugged in.
6. To throw a single bird, push and hold for just a second, the corresponding number for the house you want to throw. A green light will flash and then you say "PULL" into the microphone when you are ready.
7. To throw a report pair, push and hold the 1st house's button, the green light will flash, then push the second house's button. Your report pair is now ready to throw. If you need to cancel your selections, push the ON button a few times and it will cancel out your pair.
8. Say "PULL" into the microphone when you are ready and the first bird is thrown. Once your gun fires, that sound triggers your 2nd house to throw its bird.
9. To throw a true pair, push the "TRUE PAIR" button then select the two numbers you want to throw. Say "PULL" into the microphone when you are ready and your true pair are thrown. If you need to cancel your selections, push the ON button a few times and it will cancel out your pair.

INSTRUCTIONS FOR MULTIPLE SHOOTERS:

1. Figure out which field you are shooting on. Field 1 is just outside the clubhouse and field 2 is located down beyond the double barns.
2. Open all of the doors to each trap house and secure them so they are not in the way.
3. Grab the remote for the field you will be using. (remotes are found in the white boxes by the medical supplies up at the club house).
4. **SIGN THE SIGN OUT SHEET EACH TIME YOU USE THE REMOTES**
5. Push the ON button on the bottom left corner of the remote. NO MICROPHONE IS NEEDED FOR MULTIPLE SHOOTERS. If your remote has the microphone attached, please place the microphone back into the correct mailbox for the next shooter.
6. When your shooter is ready and says "PULL", simply push the corresponding button to the house you want thrown.
7. To throw a true pair, push the "TRUE PAIR" button then select the two numbers you want to throw. Once your shooter is ready and says "PULL" push the TRUE PAIR Enter button and your true pair are thrown. If you need to cancel your selections, push the ON button a few times and it will cancel out your pair.

ONCE YOU ARE FINISHED SHOOTING:

1. **PLACE THE REMOTE BACK INTO ITS COORESPONDING MAILBOX AT THE CLUB HOUSE. REMOTE WILL POWER OFF BY ITSELF.**
2. **CLOSE ALL TRAP HOUSE DOORS AND MAKE SURE THEY ARE SECURE.**